


esi

user guide

Lily™

LED task light


Model# LILY-LED-SLV
Model# LILY-LED-BLK
Model# LILY-LED-WHT
Model# LILY-LEDX-SLV
Model# LILY-LEDX-BLK
Model# LILY-LEDX-WHT

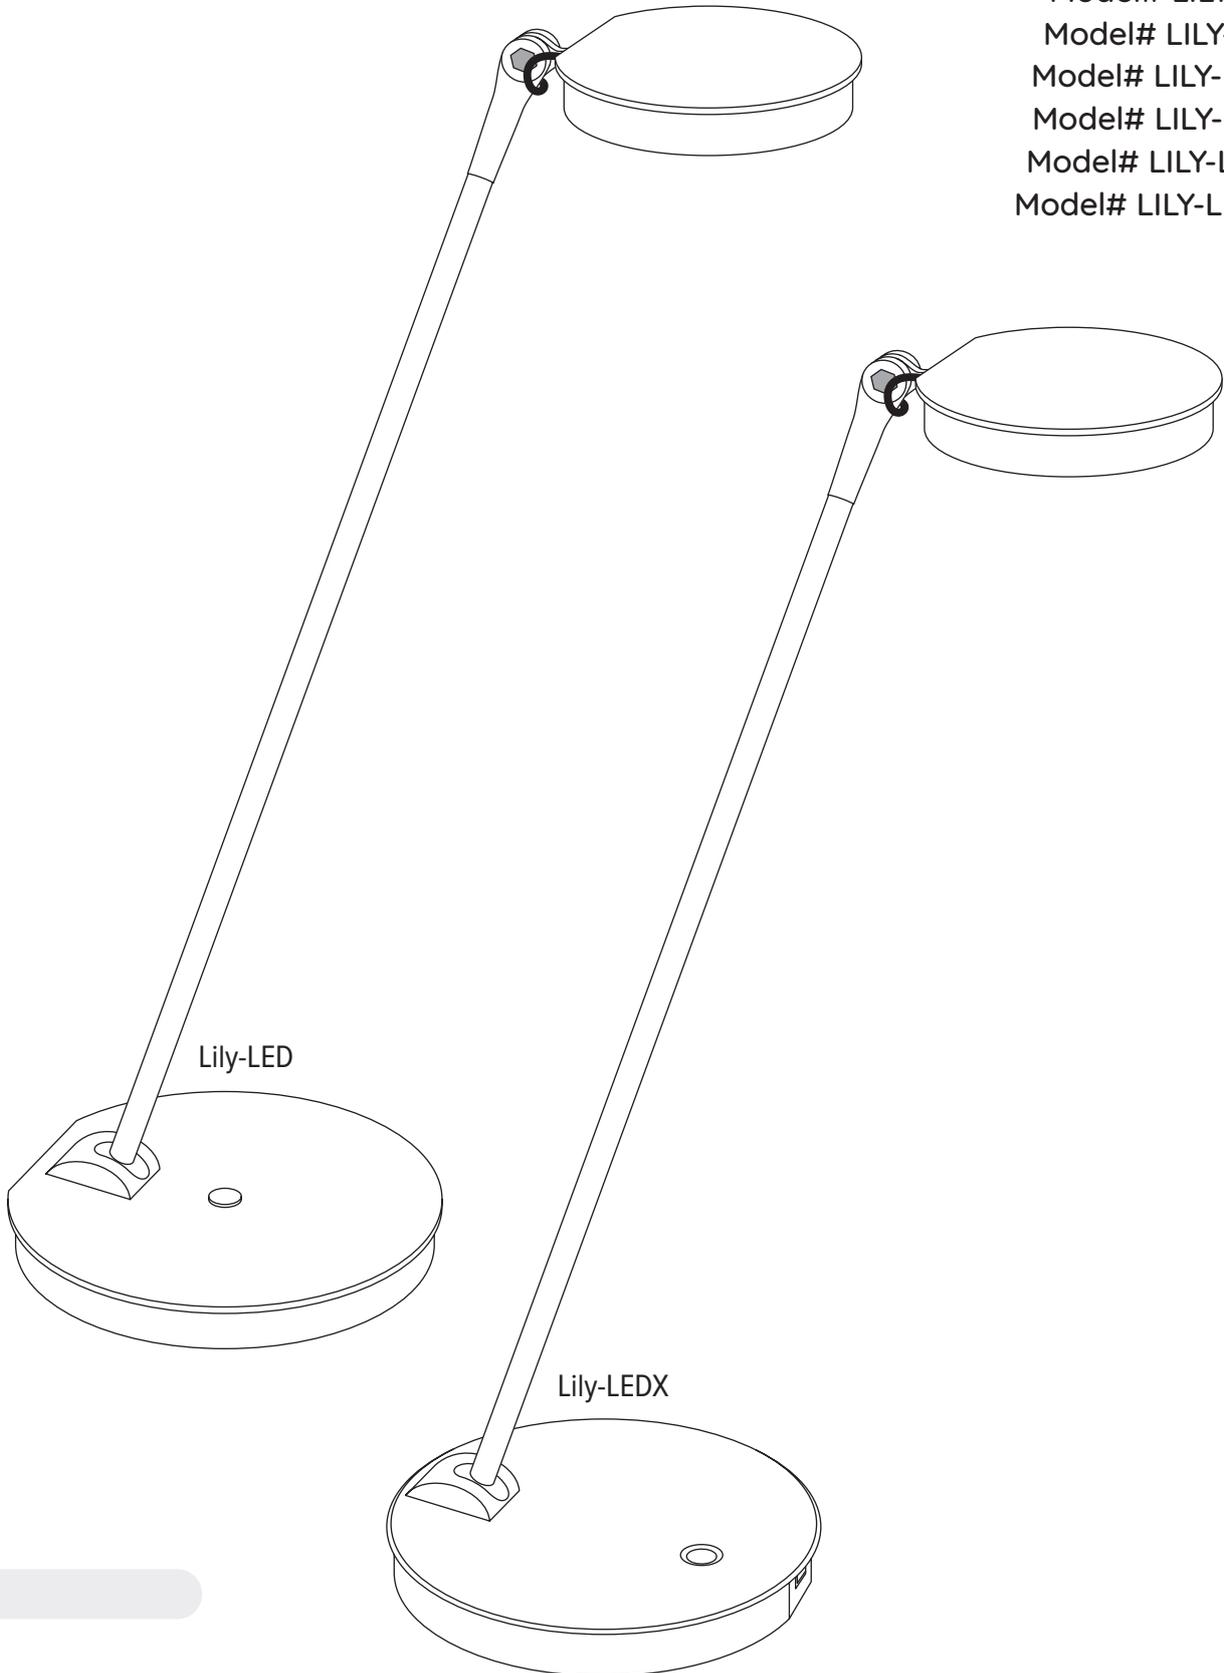



- Caution
- Do not look directly into the LED lights when lamp is operating.
- Do not direct light at other persons.
- Use only the supplied AC power adaptor.
- Do not hang, clip or tape any object to the lamp.
- Do not put this unit near any heat source or under direct sunlight.

Please review these instructions before beginning the installation. Check that the correct components (shown at right) were provided with your order. Do not discard the packaging until the product is assembled and functioning.

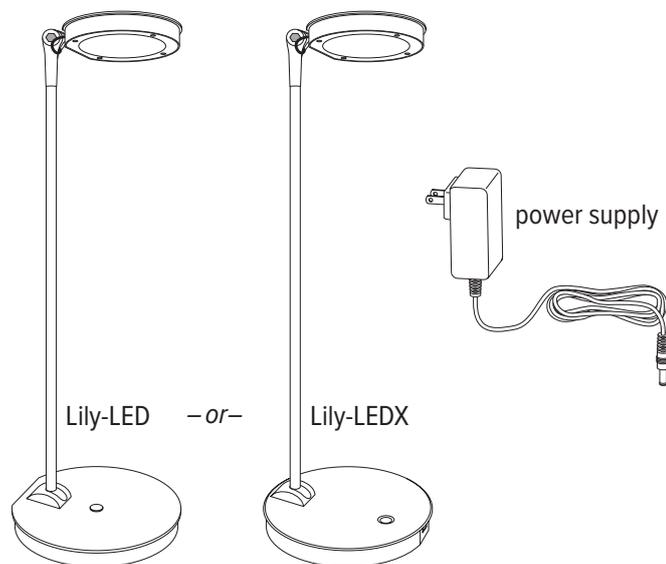

Set-up

1. Position the task light so that no obstructions prevent arm or lamp movement.
2. Insert the power supply jack into the lamp base.
3. Insert the power supply plug into an independent power outlet.
 - Do not share an outlet with high power equipment such as printers, copy machines, scanners or computer work stations. This may cause the light to flicker.

Operation

Lily-LED


1. Press and release the switch to turn the lamp on.
 2. Press the switch the second time the light output will be reduced for 30%.
 3. Press the switch one more time and the Lamp will turn off.
- LILY LED Light has automatic energy saving mode and the lamp will turn off after 6hours of continuous work.
To turn the lamp on just press the switch one time

Lily-LEDX

1. Lily-LEDX features a continuous dimming option with memory. Press and release the switch to turn the lamp on. Then press and hold the switch to gradually increase to full brightness. Release the switch when the desired level of brightness is reached.
2. Press and release the switch to turn the lamp OFF. When turned back ON, the lamp will illuminate at the previous intensity level.
3. To decrease the intensity level, first increase it to full brightness. Then press and hold the switch to dim it to the desired level. To increase the level again, the lamp first must be at its lowest intensity.
4. Aim the light by rotating the arm at the base and the lamp at the top of the arm.

Lily-LEDX has a USB port that can be used for charging smart phones, tablets and other personal electronics.

LILY LED Light has automatic energy saving mode and the lamp will turn off after 6hours of continuous work.
To turn the lamp on just press the switch one time

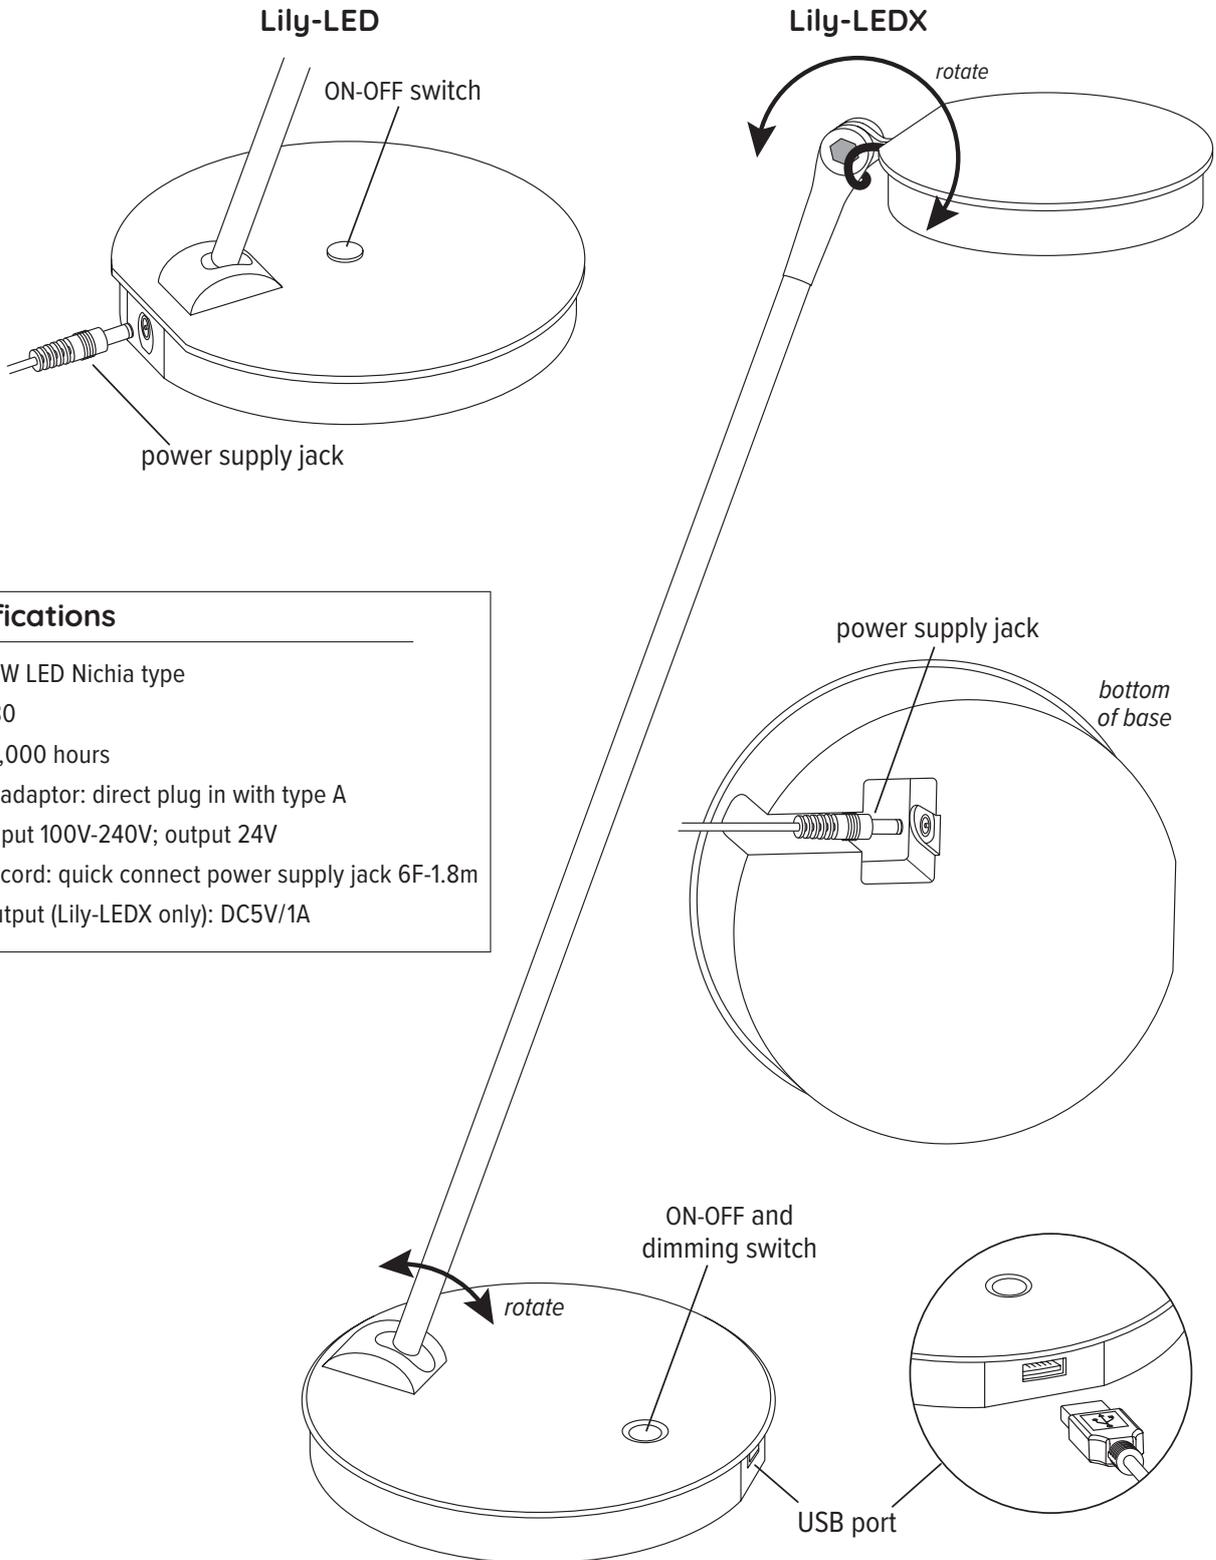

Specifications

- light: 8W LED Nichia type
- CRI: >80
- life: 70,000 hours
- power adaptor: direct plug in with type A plug input 100V-240V; output 24V
- power cord: quick connect power supply jack 6F-1.8m
- USB output (Lily-LEDX only): DC5V/1A



Lily™

LED task light

Please contact Customer Service with any questions or comments at 800.833.3746 or visit our website at esiergo.com

LIMITED WARRANTY

ESI warrants this product to be free from defects in manufacturing for a period of 1 year on the LED transformer and 15 years on all other components from the date of original purchase. This warranty extends only to the original purchaser, and does not apply if the product has been damaged or fails to function properly as a result of misuse, abuse, modification, alteration, or improper cleaning or maintenance. This warranty does not apply to damage in shipment caused by carriers, damage caused during installation, normal wear and tear, or excessive use (meaning consistent use in excess of an eight hour shift). ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED IN DURATION TO ONE YEAR FROM THE DATE OF ORIGINAL RETAIL PURCHASE. ESI's sole obligation under this warranty or any implied warranty, and the purchaser's sole remedy, is limited to the repair or replacement, at ESI's option, of the product or any defective part. Costs (such as installation, labor fees or express shipping) incurred due to replacement of products are not covered under warranty. IN NO EVENT SHALL FELLOWES, ITS AFFILIATES, SUBSIDIARIES, RELATED ENTITIES OR THEIR RESPECTIVE OFFICERS, DIRECTORS, OR EMPLOYEES, BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL, PUNITIVE, EXEMPLARY, OR SPECIAL DAMAGES.

To make a warranty claim, contact ESI at 800-833-3746 or customerservice@esiergo.com. You must provide proof of purchase, such as the original purchase order number.

The duration, terms and conditions of this warranty are valid worldwide, except where different limitations, restrictions or conditions may be required by local law.