

esi


Assembly and operation instructions

FlexCharge3™

Personal desktop power

Model # FCH3-DSK-WHT

Model # FCH3-DSK-BLK

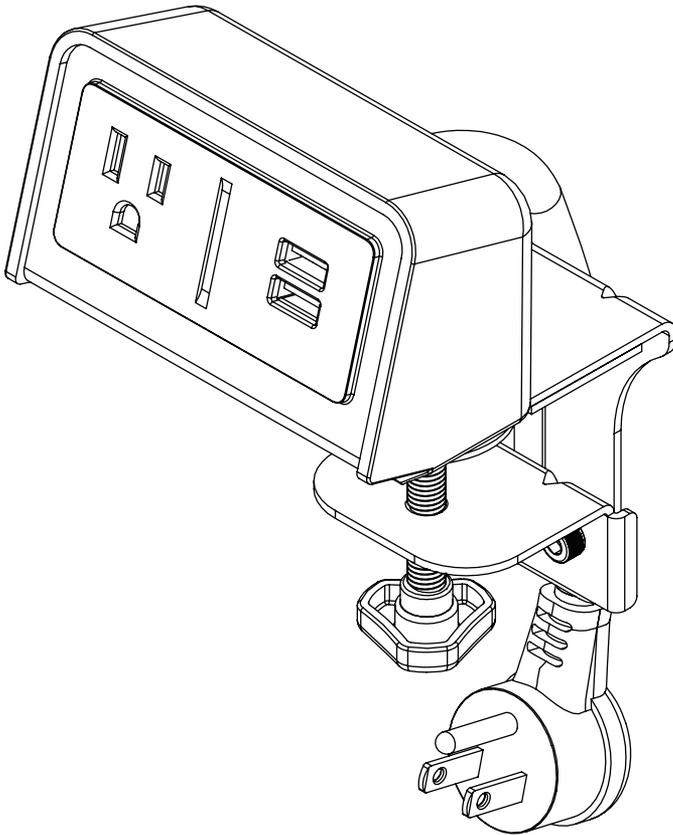

Fellowes
Brands.

FAMILY BUSINESS
SINCE 1917





Safety instructions/warnings


Always read the safety instructions carefully.

- Do not install near heat sources such as radiators, heat registers, stoves or other equipment (including amplifiers) that produce heat.
- Unplug the unit during lightning storms or when unused for extended periods of time.
- To reduce the risk of fire or electric shock, do not expose this unit to rain or moisture, including any drips or splashes.
- Objects filled with liquids such as vases, should never be placed on or near the unit.
- Do not open the unit due to risk of electric shock hazard.
- The outlet used to power the unit should be easily accessible and located near the equipment.
- The unit is for indoor use only.
- Please refer to the marking label on the unit for input and output ratings. Do not overload the power supply.
- DO NOT USE this unit in life support applications where failure of the unit can reasonably be expected to cause the failure of the life support equipment or to significantly affect its safety or effectiveness.
- DO NOT USE this unit in the presence of a flammable anesthetic mixture with air, oxygen or nitrous oxide.
- Failure to adhere to these instructions effectively voids the warranty.

Please review these instructions before beginning the installation. Check that all parts and tools needed were provided with your order (see illustration on following page). Contact your supplier if any parts are missing. Do not discard the packaging until content that the product operates to your satisfaction.



Parts provided

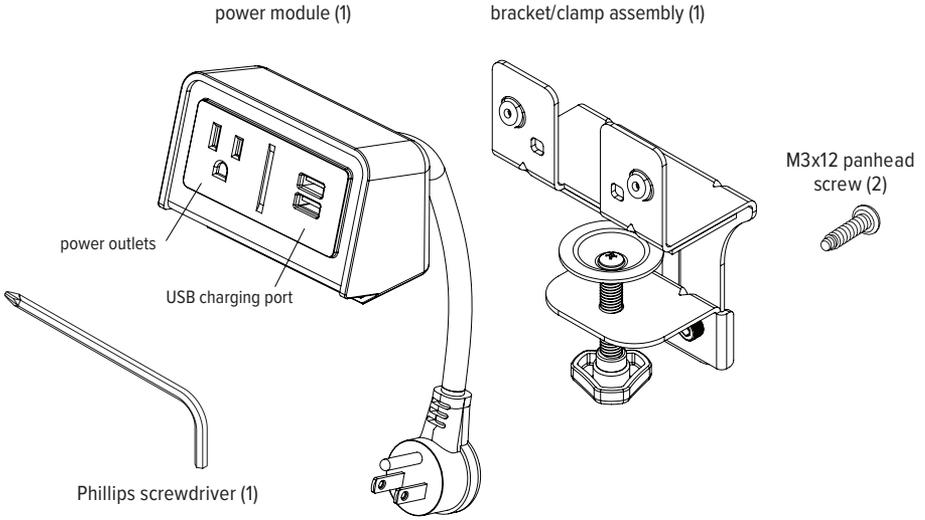

Important: hand-tighten screws only.




There is only one way to mount the FlexCharge3 power module:

- Edge mount

Edge mount


With edge mounts, the product is clamped to the edge of the worksurface.

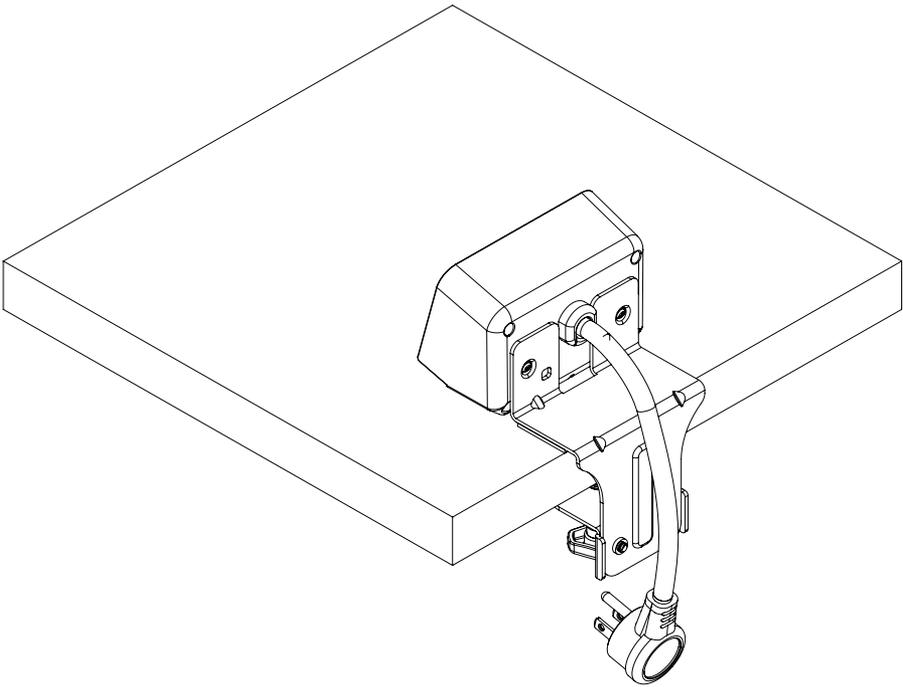




Step #1: attach bracket/clamp assembly to power module

- Route the power cord through the opening in the top bracket.
- Attach the top bracket to the rear of the power module using the two M3X12 panhead screws. Tighten securely using tools provided.

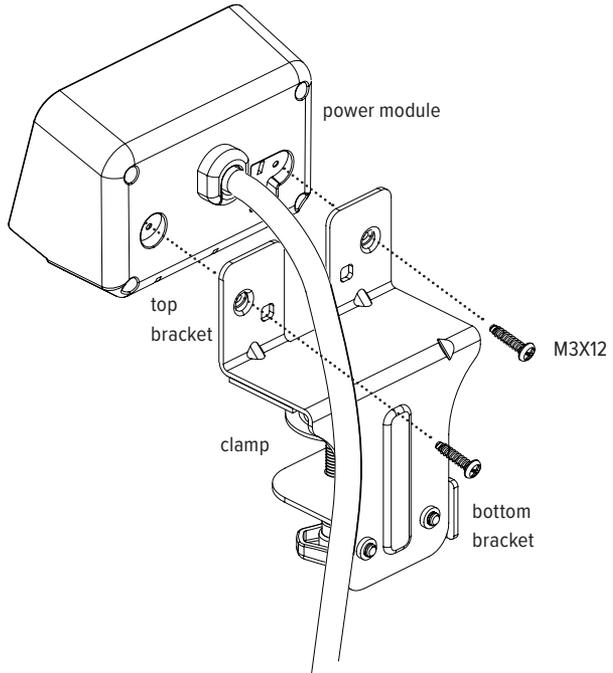

Step #2: clamp assembled FlexCharge3 to worksurface


- Position the FlexCharge3 in the desired location and clamp it securely to the worksurface by tightening the triangle knob.
- Plug the power cord into an AC outlet.

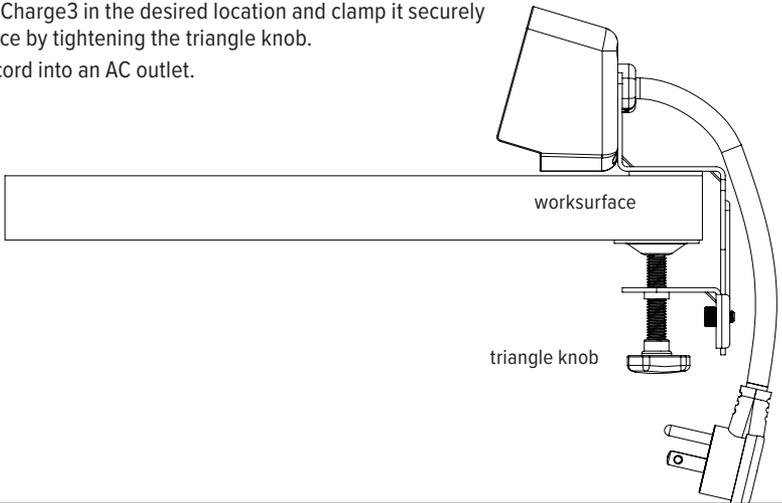



Additional Features

- FlexCharge3 complies with UL 962A Standard for Furniture Power Distribution Units and meets respective spill test criteria.
- AC outlet orientation can be rotated to accommodate large plugs

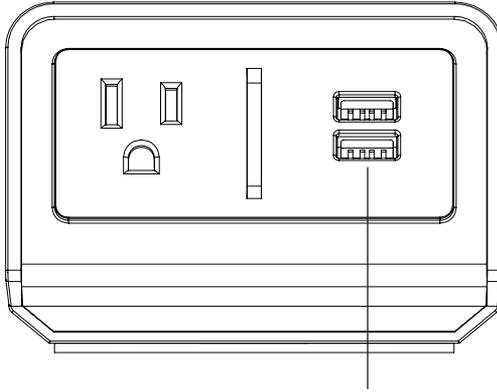

3.1 amp USB quick charging module can charge one tablet and one smart phone at the same time.



FlexCharge3TM

Personal desktop power

Please contact Customer Service with any questions or comments at 800.833.3746 or visit our website at esiergo.com

LIMITED WARRANTY

ESI warrants this product to be free from defects in manufacturing for a period of five year from the date of original purchase. This warranty extends only to the original purchaser, and does not apply if the product has been damaged or fails to function properly as a result of misuse, abuse, modification, alteration, or improper cleaning or maintenance. This warranty does not apply to damage in shipment caused by carriers, damage caused during installation, normal wear and tear, or excessive use (meaning consistent use in excess of an eight hour shift). ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED IN DURATION TO ONE YEAR FROM THE DATE OF ORIGINAL RETAIL PURCHASE. ESI's sole obligation under this warranty or any implied warranty, and the purchaser's sole remedy, is limited to the repair or replacement, at ESI's option, of the product or any defective part. Costs (such as installation, labor fees or express shipping) incurred due to replacement of products are not covered under warranty. IN NO EVENT SHALL FELLOWES, ITS AFFILIATES, SUBSIDIARIES, RELATED ENTITIES OR THEIR RESPECTIVE OFFICERS, DIRECTORS, OR EMPLOYEES, BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL, PUNITIVE, EXEMPLARY, OR SPECIAL DAMAGES.

To make a warranty claim, contact ESI at 800-833-3746 or customerservice@esiergo.com. You must provide proof of purchase, such as the original purchase order number.

The duration, terms and conditions of this warranty are valid worldwide, except where different limitations, restrictions or conditions may be required by local law.